


## 1. How to start maintenance mode

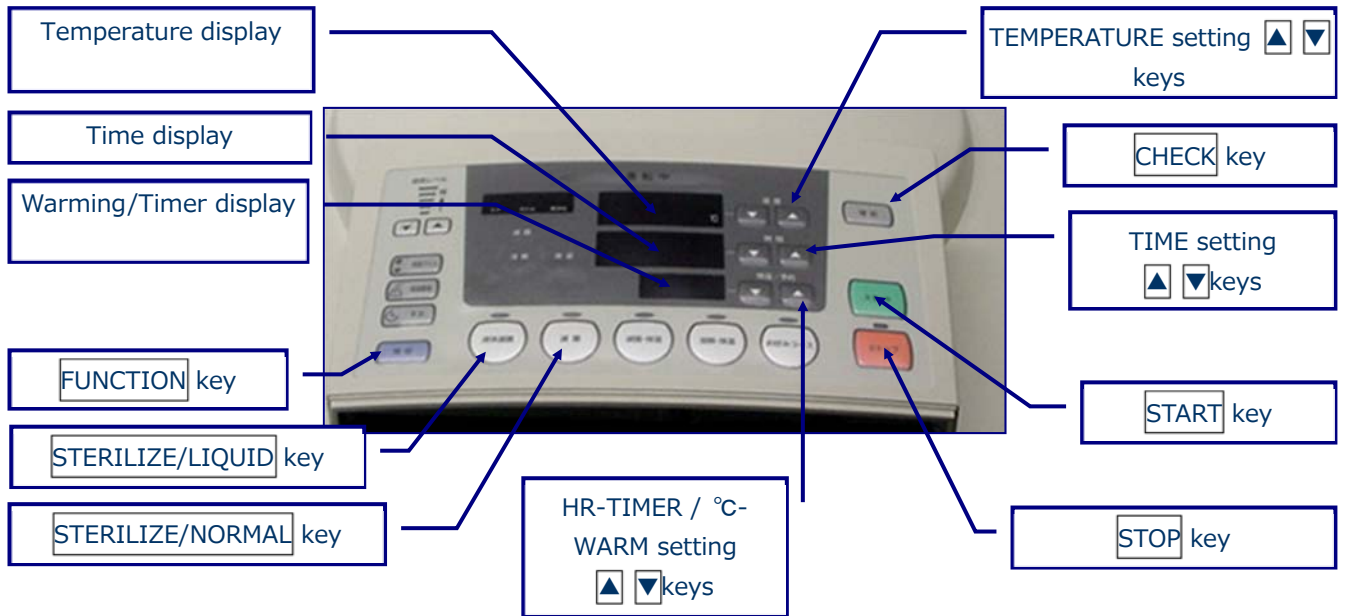

1) Turn on the power switch while pressing the **FUNCTION** , **STERILIZE/LIQUID** and **STERILIZE/NORMAL** keys at the same time.

### 2) Selecting maintenance code

\*When the maintenance mode is started, the control panel as shown below displays.

The Temperature display blinks and the maintenance code can be selected by using the Temperature ▲ or ▼ keys.

Press the **START** key to activate the function of the maintenance code selected.

When you press the **STOP** key or **CHECK** key, return to the normal mode.



## 7. Door lock monitoring [ c.08 ]

### 1) Selecting Maintenance code [ C 08 ]



### 2) Press the **START** key

